

Wind Turbine Modifications

By

David A. Katz

Pima Community College, Tucson, AZ USA

Download and print the wind turbine templates.

Glue the base template on the wood base.


Using an electric drill, drill holes for the uprights. NOTE: Make sure a piece of wood is under the wood base to protect the table top.



Insert the uprights into the holes and use hot glue to set them in place.



The base will look like this:

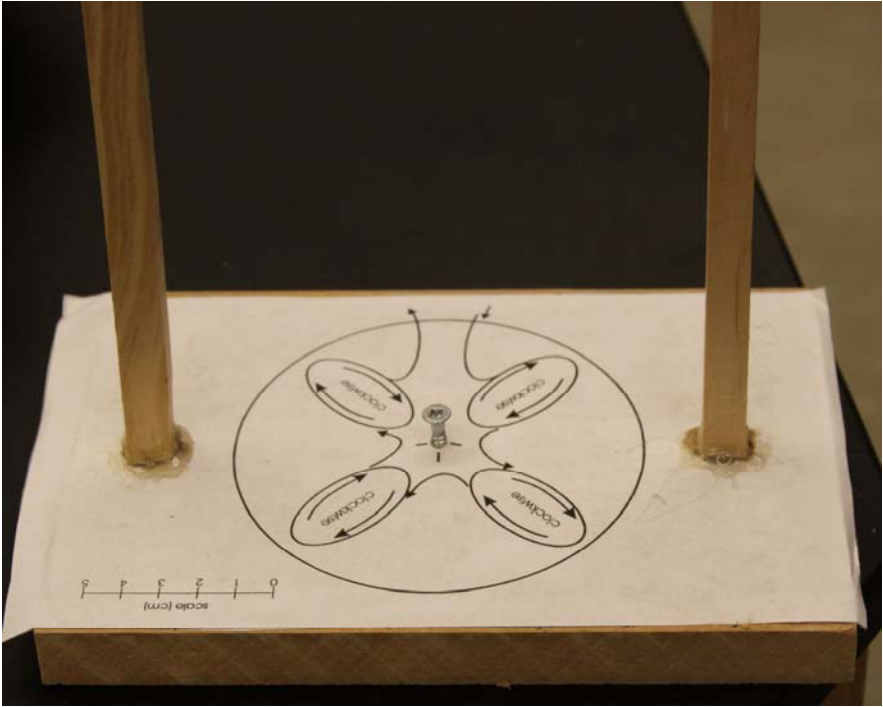

Assemble the rest of the frame.

